

```
ix_init ( ... , ix_ace **app , ... )
{
    struct myace *ap;    /* Ptr to programmer's control block    */
    ap = malloc ( sizeof ( struct myace ) );
    *app = &ap->ace ;
    ix_ace_init ( &ap->ace );

    /* Other initialization code goes here... */
}
```

Figure 23.10 Illustration of how the *ix_init* function allocates an ACE data block as required by the SDK. The SDK supplies additional arguments to *ix_init* that are not shown.