

<b>Constant</b>	<b>Value And Meaning</b>
<b>SA_CONSUME_NUM</b>	The number of packets an ingress microACE processes for each StrongARM packet. A value of N means that N-1 MAC packets will be processed each time one StrongARM packet is processed. The usual value is thirty-one.
<b>IX_EXCEPTION</b>	The value for macros to return when raising an exception. The usual value is zero.
<b>SEQNUM_IGNORE</b>	A sequence number to assign to StrongARM packets when using Gigabit Ethernet (FastPort)

**Figure 25.5** The symbolic constants that must be defined before Intel's dispatch loop macros can be included in a program.