

| <b>Field</b>  | <b>Type</b>      | <b>Purpose</b>                                 |
|---------------|------------------|--|
| <b>name</b>   | <b>string</b>    | <b>Name of the ACE in ixsys.config</b>         |
| <b>tag</b>    | <b>int</b>       | <b>ID of ACE assigned by Resource Manager</b>  |
| <b>ue</b>     | <b>int</b>       | <b>Bitmask of microengines running the ACE</b> |
| <b>bname</b>  | <b>string</b>    | <b>TAG name that the microblock uses</b>       |
| <b>ccbase</b> | <b>ix_base_t</b> | <b>Handle for crosscall service</b>            |

**Figure 26.3** Additional fields in the control block for the wwbump ACE. The control block begins with the *ix\_ace* structure that the Intel software requires.